

Setting the Jingtong Radio – Summary

| | |
|---------------------------|--|
| Lock or Unlock the Keypad | SET then * |
| Select Manual Mode | SET then 1 |
| Select Channel Mode | SET then 2 (channel only) or SET then 3 (channel and frequency) |
| Set the Frequency Step | SET then 4 (then 4 again to cycle through) |
| Set a Frequency | Select manual mode Set frequency step if necessary Enter 6 digit frequency |
| Set a Channel | Set the frequency Press B Use UP or DOWN to select channel number Press C |

